


Micro Touch 16x2-3 Custom Programmable Controller

- Red Wire = 12 volt (+ Red) on Battery
- Black Wire = Ground (- Black) on Battery
- Yellow Wire = Wrap around spark plug Wire 3 times then tape.
*** 99-02 Sea•Doo's with twin coils - wrap around each plug wire 3 times.***
- Gray / Red-Blk Wires = To Solenoid (Polarity does NOT matter)

Speed Selections

RPM Settings	Water ON RED Jumpers			
	1	2	3	4
1,200	■	■	■	■
1,250	••	■	■	■
1,300	■	••	■	■
1,350	••	••	■	■
1,400	■	■	••	■
1,450	••	■	••	■
1,500	■	••	••	■
1,550	••	••	••	■
1,600	■	■	■	••
1,650	••	■	■	••
1,700	■	••	■	••
1,750	••	••	■	••
1,800	■	■	••	••
1,850	••	■	••	••
1,900	■	••	••	••
2,000	••	••	••	••

RPM Settings	Water OFF BLUE Jumpers			
	5	6	7	8
4,600	■	■	■	■
4,750	••	■	■	■
4,900	■	••	■	■
5,050	••	••	■	■
5,200	■	■	••	■
5,350	••	■	••	■
5,500	■	••	••	■
5,650	••	••	••	■
5,800	■	■	■	••
5,950	••	■	■	••
6,100	■	••	■	••
6,250	••	••	■	••
6,400	■	■	••	••
6,550	••	■	••	••
6,700	■	••	••	••
6,850	••	••	••	••

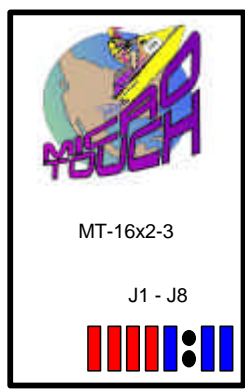

Legend

■ = Jumper - ON

•• = Jumper - OFF

Water shuts OFF 400 RPM's Later than OFF Setting

NOTE: Keep the controller mounted a few inches away from ignition coil(s) or plug wires. Also keep grease on the fuse and the adjusting jumpers at all times to eliminate corrosion!